

Rogue Fireplace


BASE PREPARATION

Base Preparation:

Base can be constructed of either poured slab or compacted gravel. See requirements below.

Know What's Below!


Whether you are planning to do it yourself or hire a professional, smart digging means calling 811 before each job. Homeowners often make risky assumptions about whether or not they should get their utility lines marked, but every digging job requires a call - even small projects like planting trees and shrubs.

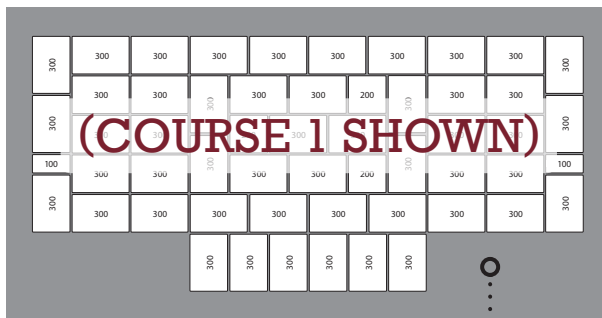

(Foundation shown in gray)

Concrete Base Foundation: ○

- 4" deep
- 4" outside perimeter of base
- Reinforce with 6" x 6" no. 10 WWM
- Compact sub-base soils to 95% of standard proctor (ASTM D698)

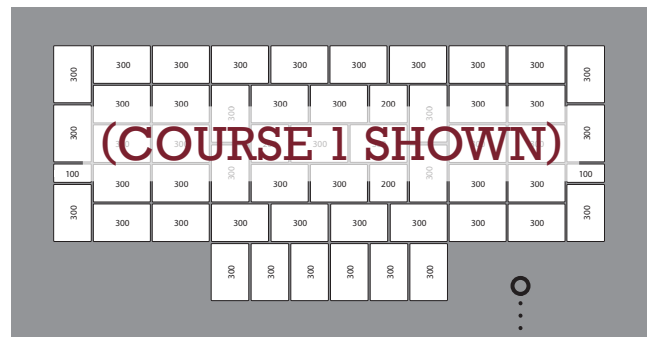

(Foundation shown in gray)

Aggregate Base Foundation: ○

- 6" deep
- 8" outside perimeter of base
- Compact sub-base soils to 95% of standard proctor
- Compact aggregate base soils to 95% of standard proctor (ASTM D698)



503 623-9084 • www.westerninterlock.com