

Rogue Fireplace

PARTS IN THE KITS





Rogue Fireplace

Chateau Wall 300mm
 Chateau Wall 200mm
 Chateau Wall 100mm
 Surebond SB-20 10.2oz. Cartidge
 Permanent Polymer Shims
 Fire Brick
 Rogue Hearth
 Rogue Trim (for firebox)
 Angle Iron Support
 Rogue Chimney Cap

Rogue Woodbox (x2 shown)

Chateau Wall 300mm
 Chateau Wall 200mm
 Chateau Wall 100mm
 Surebond SB-20 10.2oz. Cartidge
 Rogue Woodbox Cap

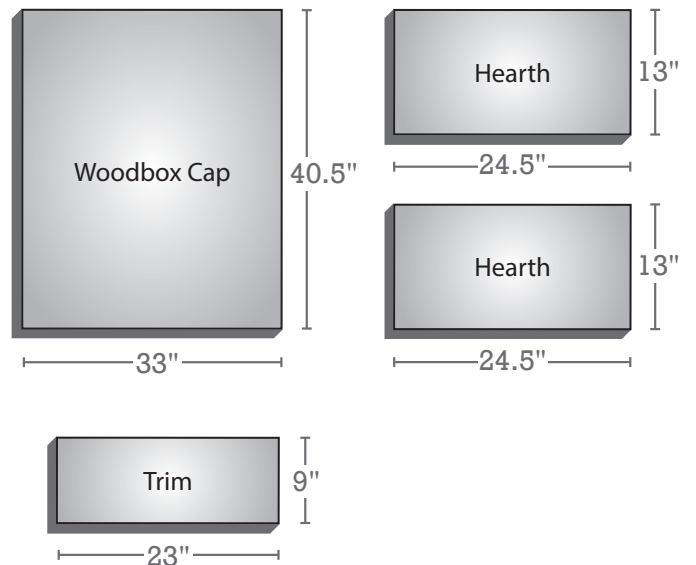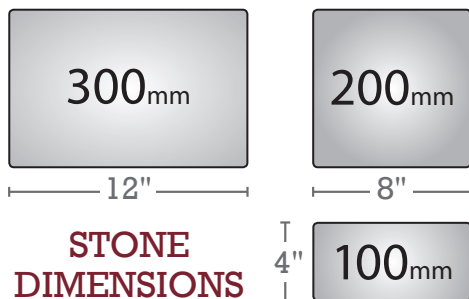

503 623-9084 • www.westerninterlock.com

Rogue Fireplace


BASE PREPARATION

Base Preparation:

Base can be constructed of either poured slab or compacted gravel. See requirements below.

Know What's Below!


Whether you are planning to do it yourself or hire a professional, smart digging means calling 811 before each job. Homeowners often make risky assumptions about whether or not they should get their utility lines marked, but every digging job requires a call - even small projects like planting trees and shrubs.

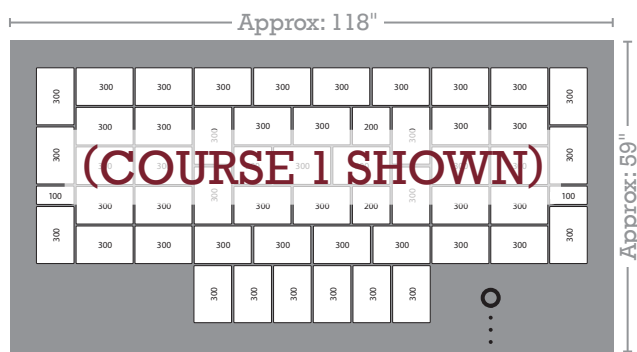

(Foundation shown in gray)

Concrete Base Foundation: ○

- 4" deep
- 4" outside perimeter of base
- Reinforce with 6" x 6" no. 10 WWM
- Compact sub-base soils to 95% of standard proctor (ASTM D698)
- Requires 30 bags of concrete mix to prepare the foundation as shown

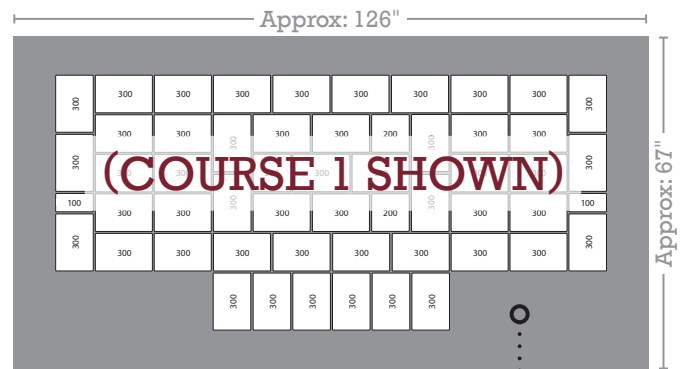

(Foundation shown in gray)

Aggregate Base Foundation: ○

- 6" deep
- 8" outside perimeter of base
- Compact sub-base soils to 95% of standard proctor
- Compact aggregate base soils to 95% of standard proctor (ASTM D698)

Helpful Hints:

The manufacturing process used, leaves the Chateau Wall blocks with a smooth side and a rough side. When installing the stones alternating between the smooth side and the rough side will help keep the stones level. Each kit also has included Permanent Polymer Shims that can be used if necessary to improve the leveling of the stones.



503 623-9084 • www.westerninterlock.com

Rogue Fireplace


**Total
Stones:**
(as shown)
100: 41
200: 65
300: 323

**Each
Woodbox:**

100: 4 (x2) = 8
200: 8 (x2) = 16
300: 44 (x2) = 88

**Fireplace
Only:**

100: 33
200: 49
300: 235

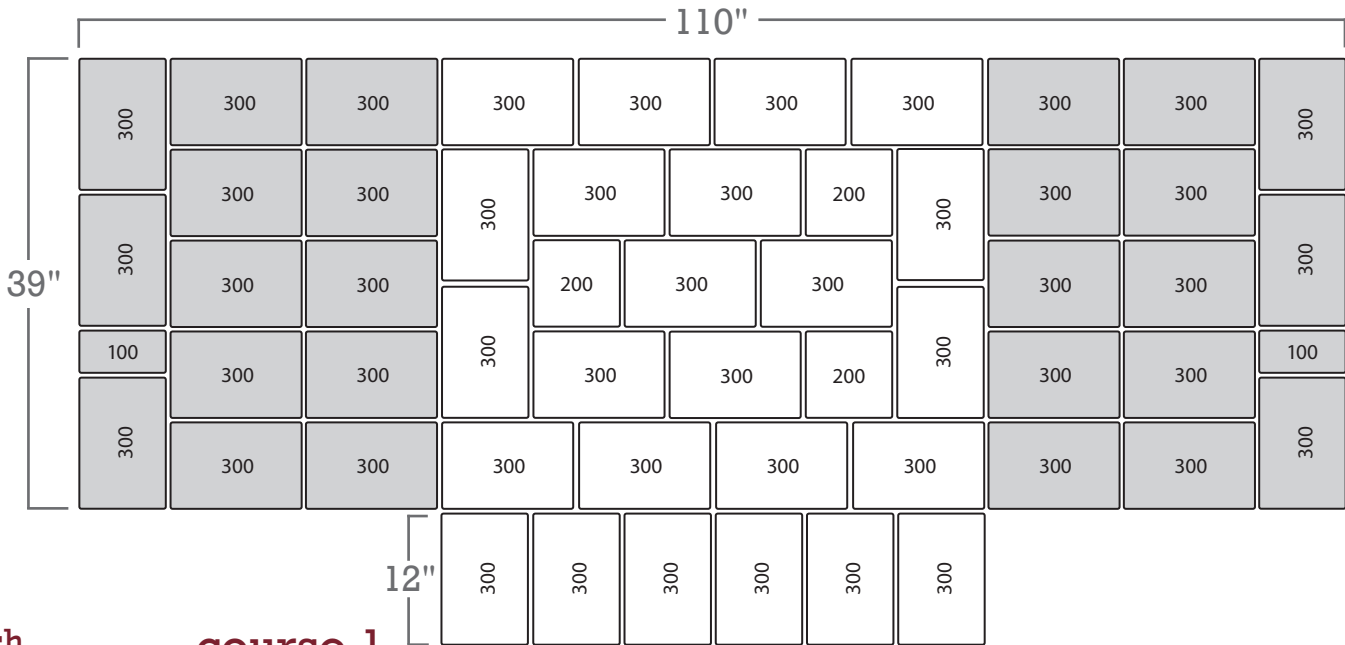

**Each
Woodbox
(x2):**

100: 1
300: 13

**Fireplace
Only:**

200: 3
300: 24

course 1

Stones needed

(as shown)

100: 2

200: 3

300: 50






Rogue Fireplace



course 2

Stones needed


100: 2
200: 9
300: 24

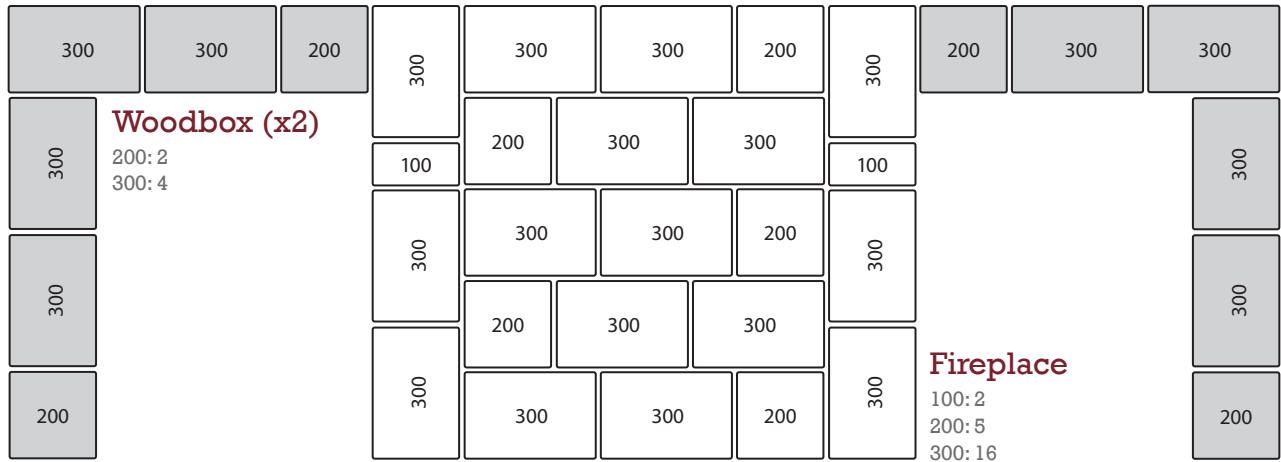

course 3

Stones needed

100: 2
200: 3
300: 28

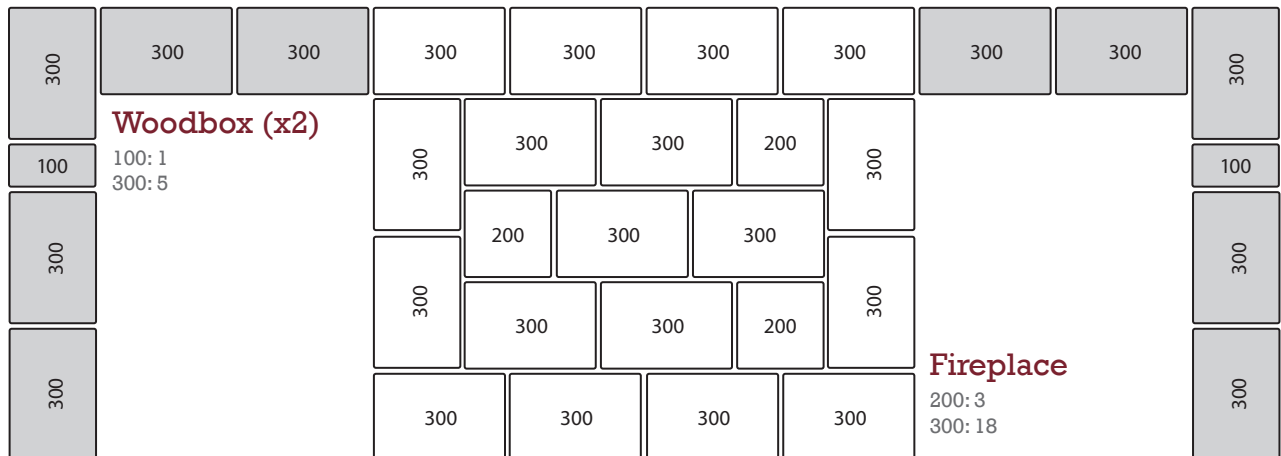




Rogue Fireplace



course 4

Stones needed


100: 2
200: 9
300: 24

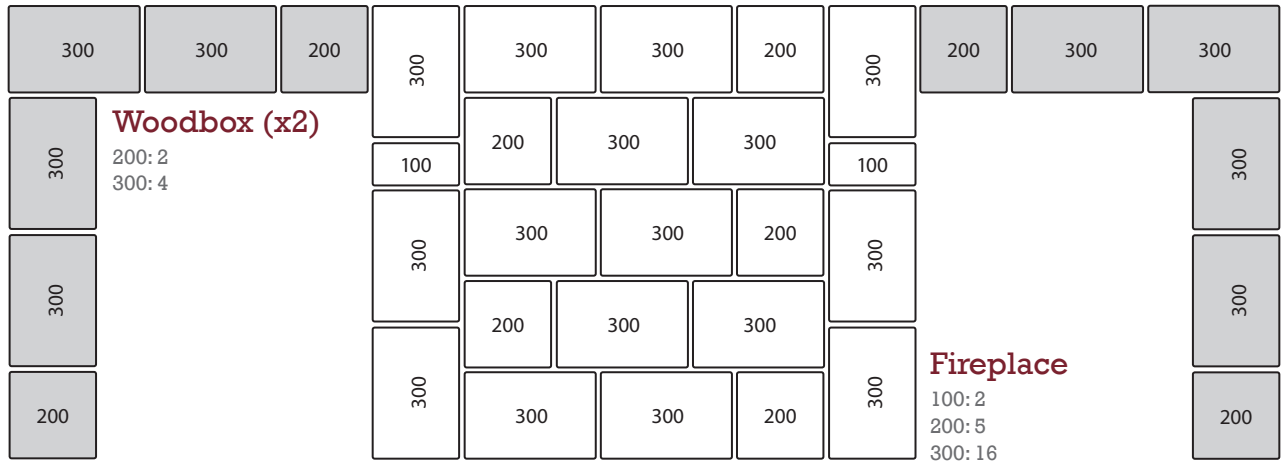

course 5

Stones needed

100: 2
200: 0
300: 20

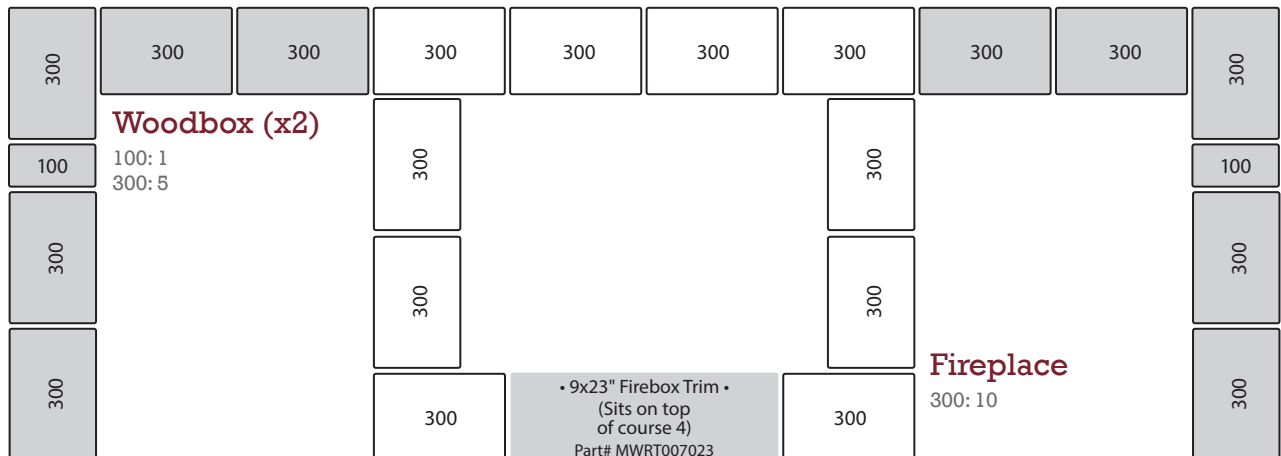




Rogue Fireplace

course 6



Stones needed (as shown)

100: 4
200: 5
300: 16

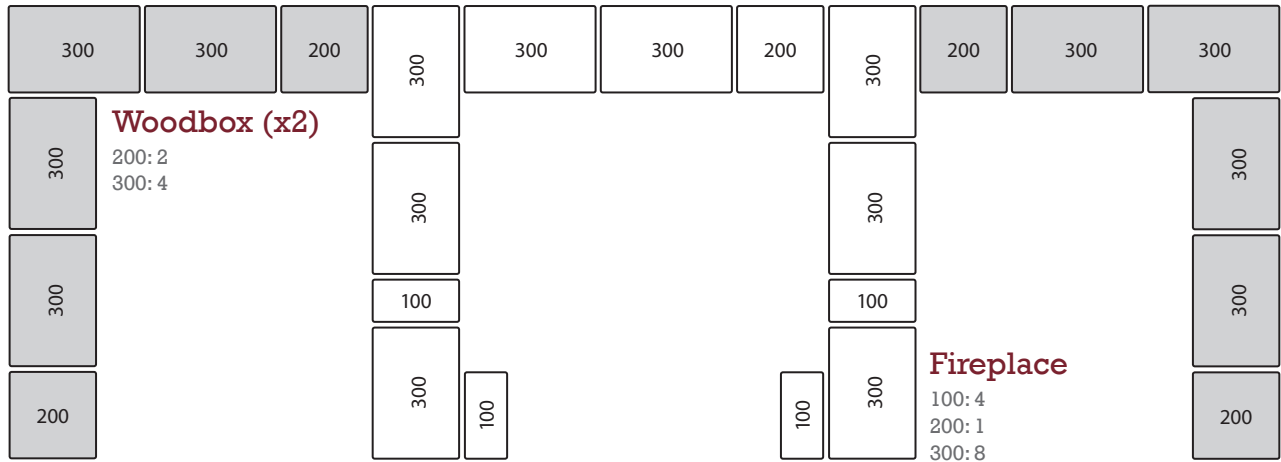


course 7



Stones needed

100: 2
200: 0
300: 20

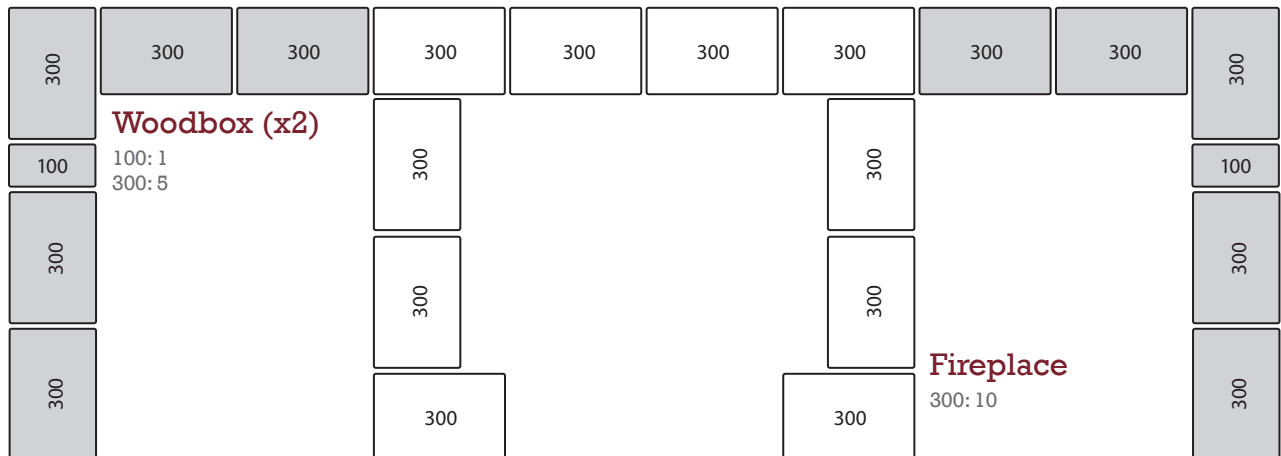




Rogue Fireplace



course 8

Stones needed (as shown)

100: 2
200: 7 (5 - fireplace only)
300: 16 (6 - fireplace only)

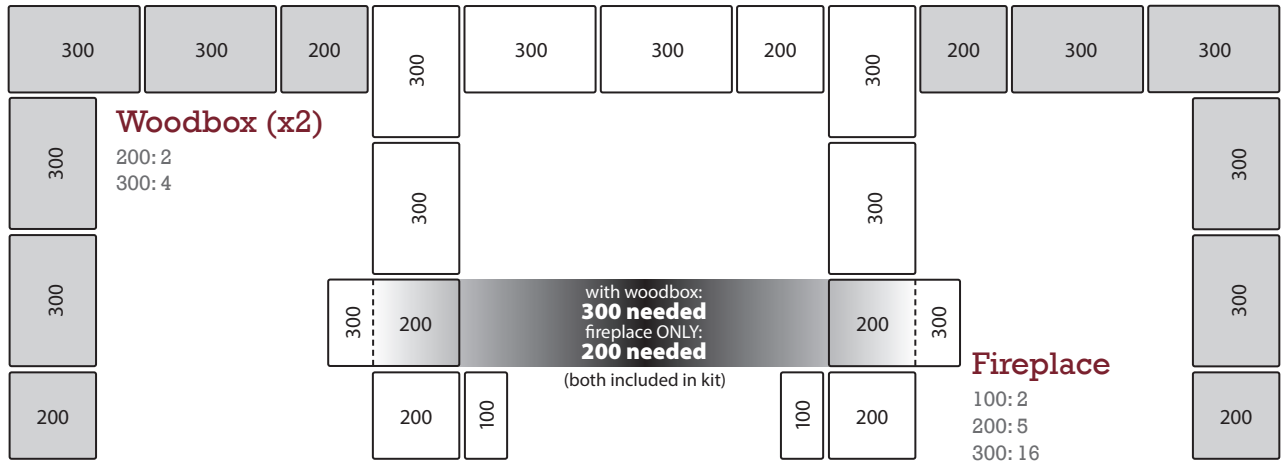


course 9

Stones needed

100: 0
200: 0
300: 10

Fireplace 300: 10

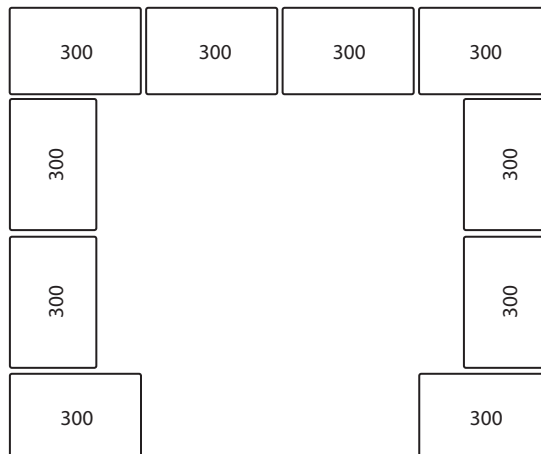



Rogue Fireplace




course 10

Stones needed

100: 2 full
 + (2 with 1/4" notch)
 200: 1
 300: 8

Metal needed


30" 4x6 angled

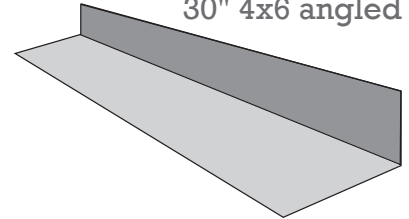

Part# MWRS000033

Fireplace

100: 4
 200: 1
 300: 8

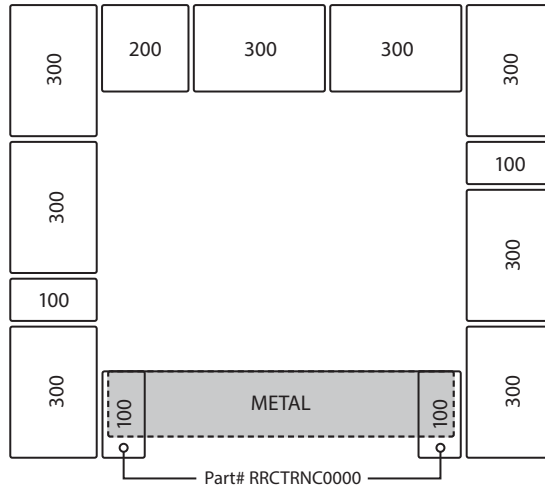

NOTE!

Now is a good time to install firebricks. (See last page for instructions.)

course 11

Stones needed

100: 0
 200: 6
 300: 10



Fireplace

200: 6
 300: 10





Rogue Fireplace





course 12

Stones needed

100: 4
200: 1
300: 8

Fireplace

100: 4
200: 1
300: 8

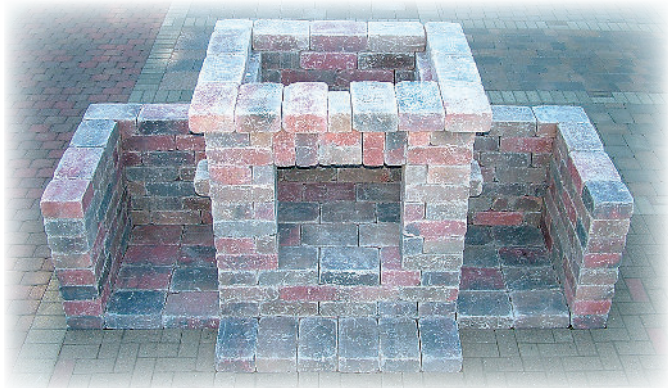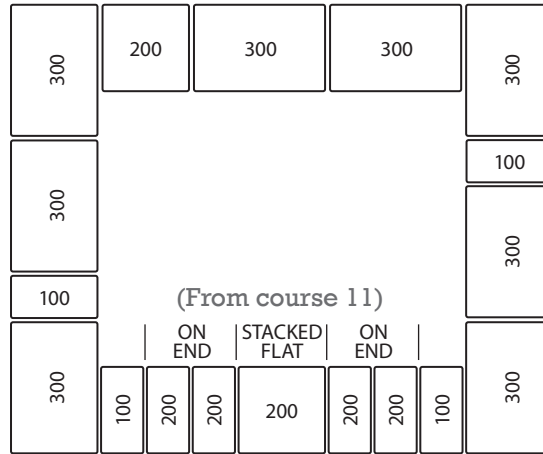


course 13

Stones needed

100: 1
200: 0
300: 13
+ (2 cut to 5¾)
Part# RRCSRC000


Fireplace

100: 1
300: 13

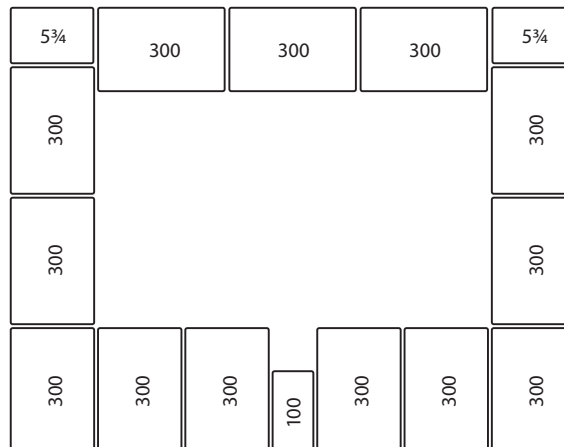



Rogue Fireplace

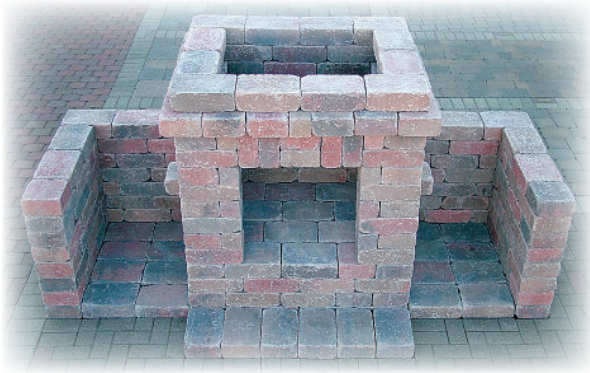


course 14

Stones needed

100: 0
200: 0
300: 12

Fireplace 300: 12

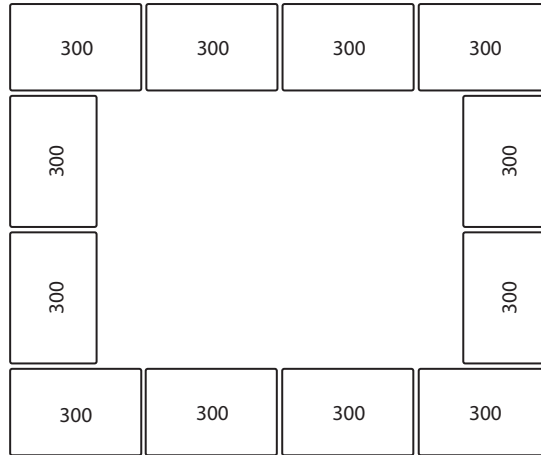


course 15

Stones needed

100: 2
200: 2
300: 8
+ (2 cut to 5¾)

Fireplace 100: 2 200: 2 300: 8

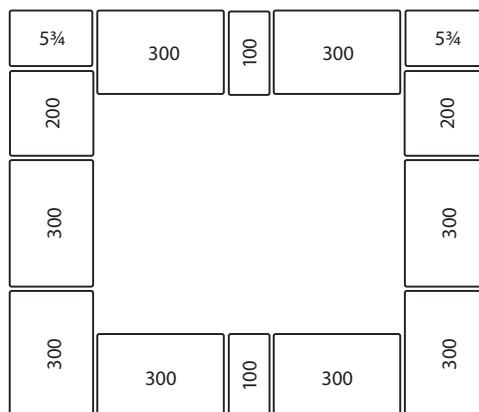



Rogue Fireplace

course 16



Stones needed

100: 2

200: 2


300: 8

Fireplace

100: 2

200: 2

300: 8

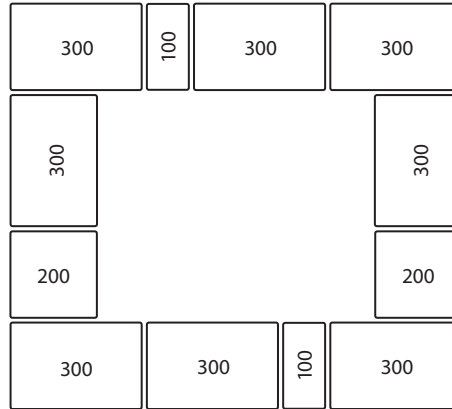

course 17



Stones needed


100: 0

200: 0

300: 10


Fireplace

300: 10

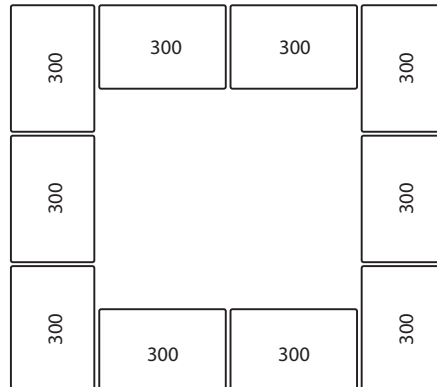



Rogue Fireplace

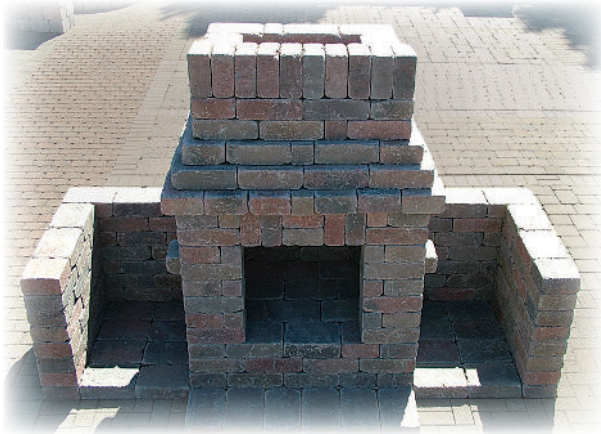



course 18

Stones needed

100: 1
200: 12
300: 5

Fireplace

100: 1
200: 12
300: 5

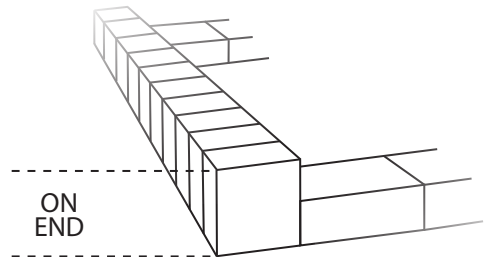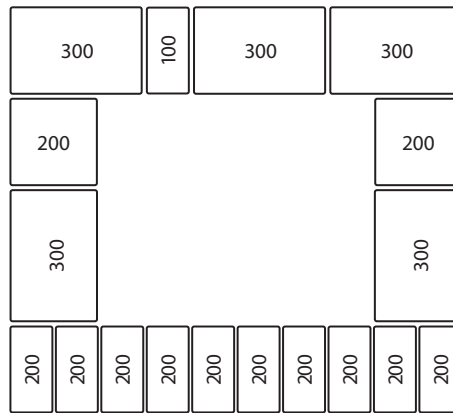



course 19

Stones needed

100: 2
200: 0
300: 6

Fireplace


100: 2
300: 6

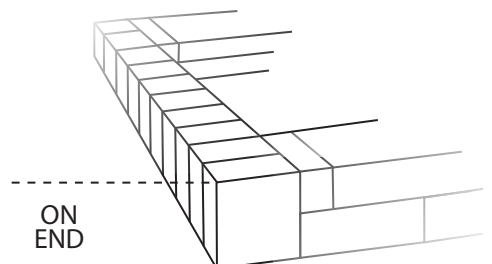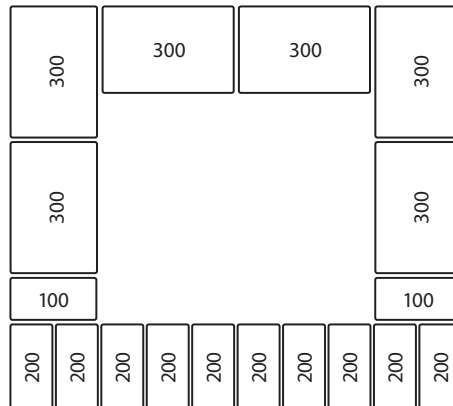

(From course 18)



Rogue Fireplace

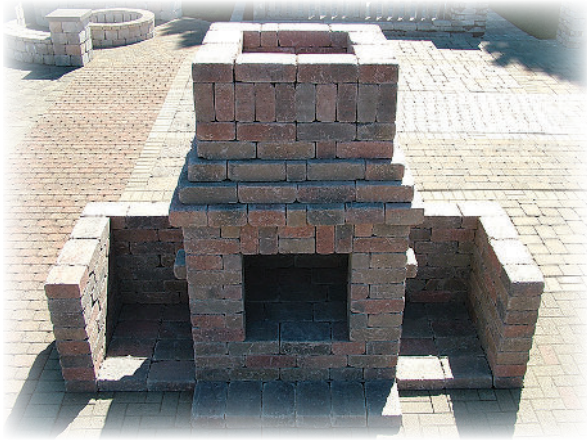

course 20

Stones needed

100: 3


200: 0

300: 9

Fireplace

100: 3

300: 9

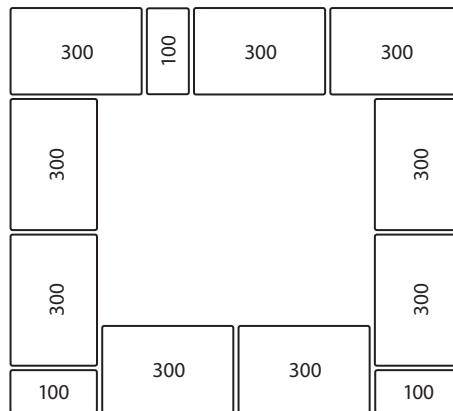

course 21

Stones needed

100: 3


200: 0

300: 9

Fireplace

100: 3

300: 9

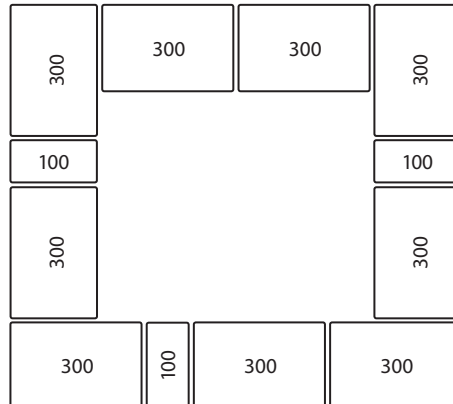



Rogue Fireplace

course 22


Stones needed

100: 1
200: 3
300: 9



Fireplace

100: 1
200: 3
300: 9

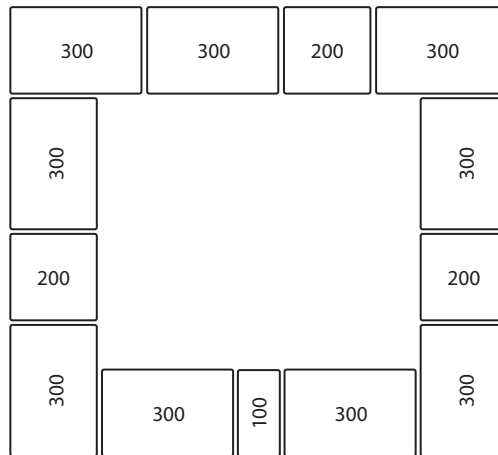

Final Step

- Place Rogue chimney cap (part# MWRA000001) on top of fireplace with flanges toward inside. Glue all four corners underneath flange.
- Glue hearth stone in place, (part# MWRH007024)
- Set caps on woodboxes, (if applicable) (part# MWRC007045)

Rogue Fireplace

FIREBRICK INSTALLATION

Install Firebrick now:

Step 1: Start by applying a generous amount of adhesive to the bottom of a brick. Begin at the bottom of the fireplace. Place a full brick in the front left corner and end with a half brick on the right side. Continue to install by placing glued bricks edge to edge (no joint) as shown. When you finish the bottom of the firebox, there will be a small gap between the firebrick and the back wall.

Finish: You will need enough adhesive to install the trim piece for the front of the firebox. DO NOT use adhesive to grout any gaps.

