



DESCHUTES FIREPLACE INSTALLATION

The Concrete Advantage. | westerninterlock.com

NOTICE: Check your pallets!

We strive to maintain the highest level of integrity when palletizing our kits, but sometimes mistakes get made. To ensure that your project goes off without a hitch, use the checklist below to verify the contents of the kit before starting.

PART CHECKLIST

Deschutes Fireplace

- 174 Chateau Wall™ 300
- 30 Chateau Wall™ 200
- 31 Chateau Wall™ 100
- 2 Chateau Wall™ 200s (*notched*)
- 35 Firebrick 4.5x9x1.25"
- 4 Firebrick 4.5x4.5x1.25"
- 3 Firebrick 2.25x9x1.25"
- 4 Firebrick 3.375x4.5x1.25"
- 4 Firebrick 5x4.5x1.25"
- 4 Firebrick 6x4.5x1.25"
- 2 Fireplace Hearth 13x22.5x2.5"
- 1 Fireplace Trim 9x19x2.5"
- 8 Permanent Polymer Shims
- 1 27" 4"x6" Angle Iron Support
- 9 SB20 Adhesive 10oz Tubes
- 1 12"x24" Steel Chimney Cap
- 1 611 Refractory Cement 1 gal. pail
- 1 Margin Trowel
- 1 Installation Manual



100
200x100x100mm • 7.87x3.94x3.94"



200
200x200x100mm • 7.87x7.87x3.94"



300
300x200x100mm • 11.81x7.87x3.94"

Deschutes Woodbox

- 39 Chateau Wall™ 300
- 8 Chateau Wall™ 200
- 1 33"x33" Woodbox Cap
- 4 Permanent Polymer Shims
- 3 SB20 Adhesive 10oz Tubes

Deschutes Fireplace Installation





NOTICE: Know What's Below!

Whether you are planning to do it yourself or hiring a professional, smart digging means calling 811 before each job. Homeowners often make risky assumptions about whether or not they should get their utility lines marked, but every digging job requires a call - even small projects like planting trees and shrubs.

BASE PREPARATION

Base can be constructed of either poured slab or compacted gravel. It is extremely important that the base be level. See base construction requirements below.

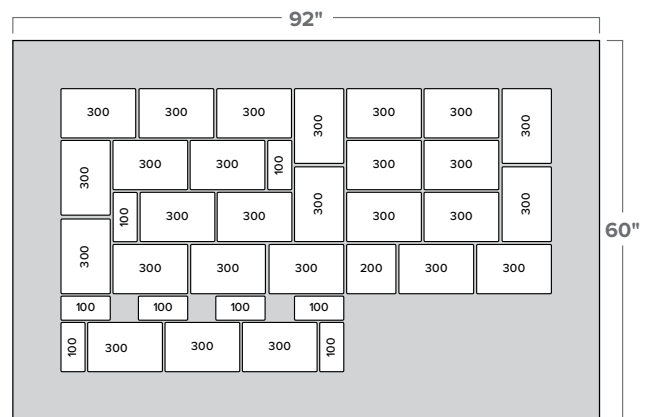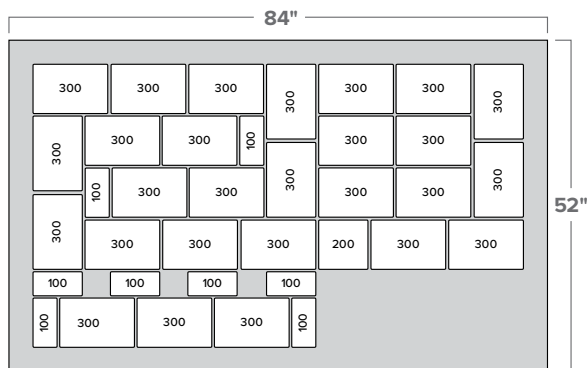

Concrete Base Foundation

- Slab must be a minimum of 4" deep
- Slab must extend 4" outside perimeter of the fireplace base
- Reinforce slab with 6"x6" #10 woven wire mesh (WWM)
- Compact sub-base soils (95% of standard proctor-ASTM D698)
- Slab as described requires approximately 15 90lb bags of concrete mix

Aggregate Base Foundation

- Base must be a minimum of 6" deep
- Base must be constructed of ¾-0 gravel (ODOT road base or equivalent)
- Base must extend 8" outside perimeter of the fireplace base
- Base as shown requires approximately .75 cubic yards (2000lbs) of gravel
- Compact sub-base soils (95% of standard proctor-ASTM D698)
- Compact aggregate base (95% of standard proctor-ASTM D698)


PRO TIP: Adhesive Application

Use the included 10oz tubes of SB20 to glue each course together. Place several dime-sized globs of adhesive on each block, taking care to hold back from the edge to avoid adhesive spewing out of the joint. For best results, give each stone a quick brushing to remove any dust and debris from the block's surface.



PRO TIP: Setting the First Course

Use a level and rubber mallet to ensure that each stone is completely level before moving on. Be sure to check from top-to-bottom and side-to-side.

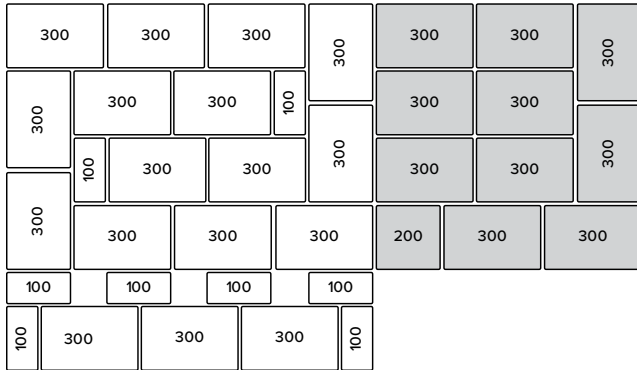

COURSE 1

Blocks Needed (as shown)


100 8
200 1
300 27

Blocks Needed (fireplace only)

100 8
300 17



Optional woodbox
shown in gray.

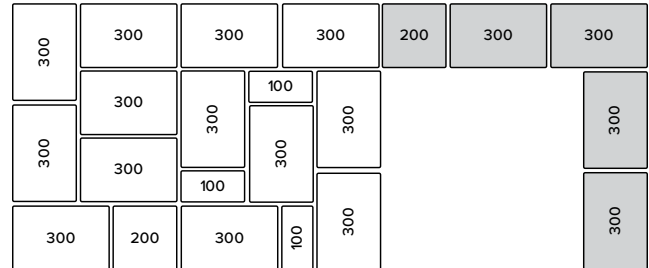


COURSE 2

Blocks Needed (as shown)

100 3
200 2
300 17

Blocks Needed (fireplace only)

100 3
200 1
300 13

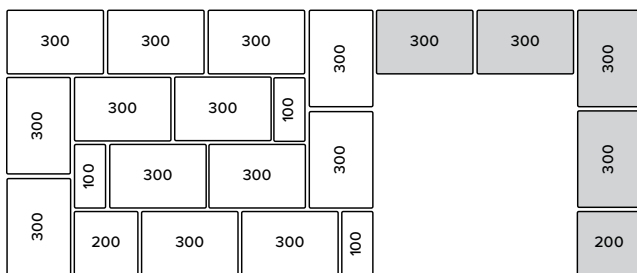


COURSE 3

Blocks Needed (as shown)

100 3
200 2
300 17

Blocks Needed (fireplace only)

100 3
200 1
300 13

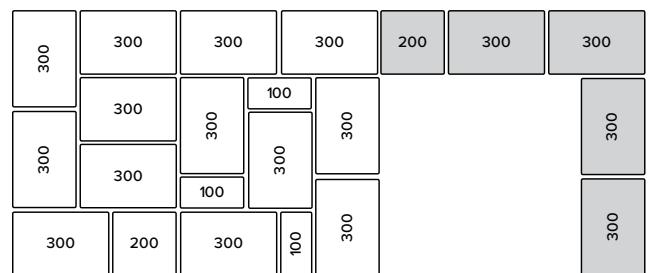

COURSE 4

Blocks Needed (as shown)

100 3
200 2
300 17

Blocks Needed (fireplace only)

100 3
200 1
300 13





100	1
200	1
300	12



100	1
300	8

The diagram shows a 10x10 grid with 13 rectangles. The rectangles are arranged as follows:


- Row 1: 300, 300, 300, 300, 300, 300, 300
- Row 2: 300, 300, 300, 300, 300, 300, 300
- Row 3: 300, 300, 300, 300, 300, 300, 300
- Row 4: 300, 300, 300, 300, 300, 300, 300
- Row 5: 300, 300, 300, 300, 300, 300, 300
- Row 6: 300, 300, 300, 300, 300, 300, 300
- Row 7: 300, 300, 300, 300, 300, 300, 300
- Row 8: 300, 300, 300, 300, 300, 300, 300
- Row 9: 300, 300, 300, 300, 300, 300, 300
- Row 10: 300, 300, 300, 300, 300, 300, 300

COURSE 7

100	1
200	1
300	12



100	1
300	8

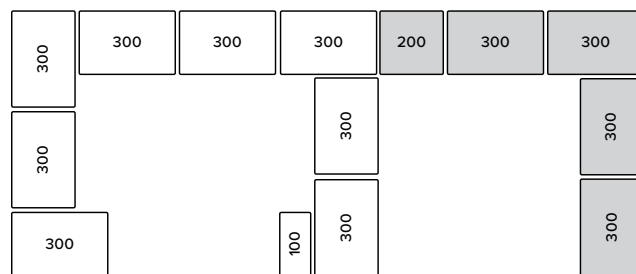


COURSE 6

100	1
200	1
300	12



100	1
300	8

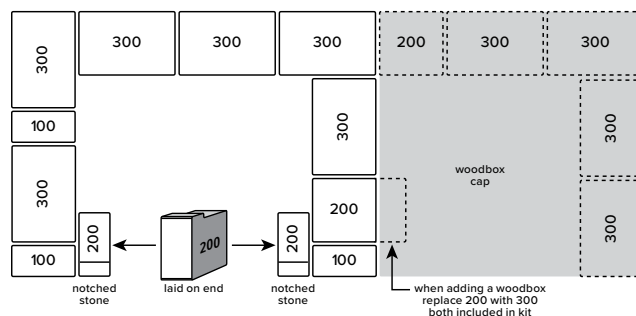

COURSE 8

100	3
200	3 (2 notched)
300	11




100	3
200	3 (2 notched)
300	6

It is easiest to install the firebrick once you have laid Course 8. Access to the fireplace interior is the best at this point. See page 9 for installation instructions.



If you are building a fireplace with a woodbox, once Course 8 is laid, the woodbox is complete.

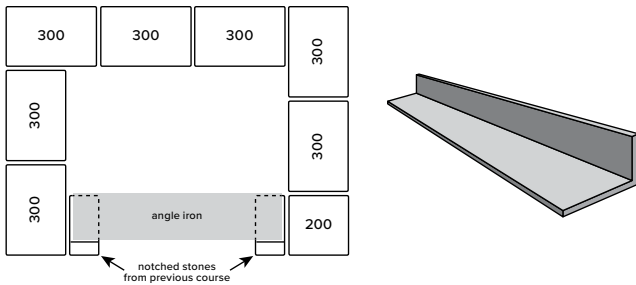

COURSE 9

Blocks Needed (as shown)

200 1

300 7


Angle Iron 1

Blocks Needed (fireplace only)

200 1

300 7

Angle Iron 1

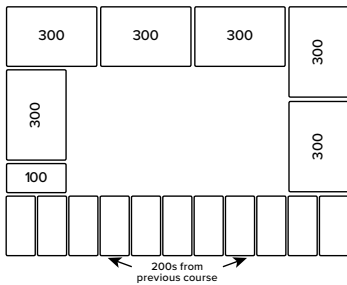

COURSE 11

Blocks Needed (as shown)


100 1

300 6

Blocks Needed (fireplace only)

100 1

300 6

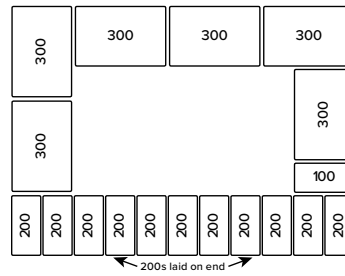

COURSE 10

Blocks Needed (as shown)

100 1

200 11 (laid on end)


300 6

Blocks Needed (fireplace only)

100 1

200 11 (laid on end)

300 6

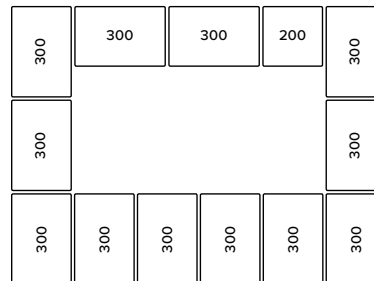

COURSE 12

Blocks Needed (as shown)

200 1


300 12

Blocks Needed (fireplace only)

200 1

300 12



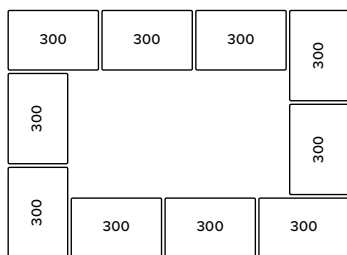

COURSE 13

Blocks Needed (as shown)

300 10

Blocks Needed (fireplace only)

300 10



COURSE 14

Blocks Needed (as shown)


100 2

300 8

Blocks Needed (fireplace only)

100 2

300 8

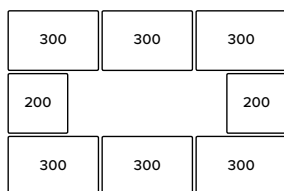

COURSE 15

Blocks Needed (as shown)


200 2

300 6

Blocks Needed (fireplace only)

200 2

300 6

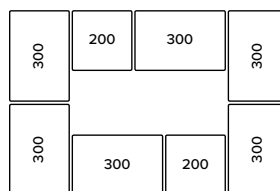

COURSE 16

Blocks Needed (as shown)

200 2


300 6

Blocks Needed (fireplace only)

200 2

300 6



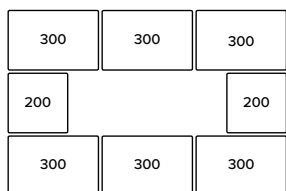

COURSE 17

Blocks Needed (as shown)

200 2


300 6

Blocks Needed

(fireplace only)

200 2

300 6

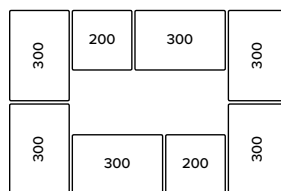

COURSE 18

Blocks Needed (as shown)

200 2


300 6

Blocks Needed

(fireplace only)

200 2

300 6

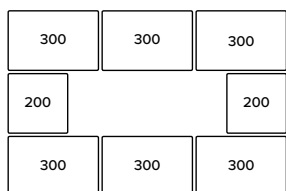

COURSE 19

Blocks Needed (as shown)

200 2


300 6

Blocks Needed

(fireplace only)

200 2

300 6

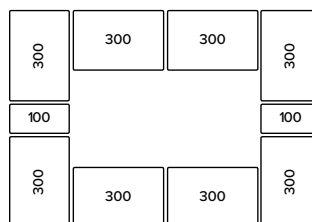

COURSE 20

Blocks Needed (as shown)

100 2

300 8

Blocks Needed

(fireplace only)

100 2

300 8



FIREBRICK INSTALLATION

STEP 1: Clean the block

For best results, we recommend that you either brush or vacuum the block to remove any dust from the surface for proper adhesion.

STEP 2: Mix the Refractory Cement

The included one gallon bucket of 611 Refractory Cement comes premixed, but we recommend that you give it a quick but thorough mix before starting.

STEP 3: Lay the Floor

2¼"x9"	2¼"x9"	2¼"x9"
4½" x4½"		4½" x4½"
4½" x4½"		4½" x4½"

Firebrick Needed

9"x4½"	7
4½"x4½"	4
2¼"x9"	3

Begin by laying the floor in the bottom of the firebox. ***It is not necessary to mortar the floor in place.*** Place a full brick in the front left corner and end with a half brick on the right side. Continue the installation by placing bricks edge to edge (no joint) as shown below. When you finish the bottom of the firebox, there will be a small gap between the firebrick and the back wall.

STEP 4: Lay the Back Wall

3⅜" x4½"		3⅜" x4½"
3⅜" x4½"		3⅜" x4½"

Firebrick Needed

9"x4½"	10
3⅜"x4½"	4

Now you are ready to install the back wall. Apply a thin layer of refractory cement to the back of the firebricks, and install them as shown below. Make sure to leave a even gap on either side of the firebox, it will be covered by the sides.

STEP 5: Lay the sides

	4½"x6"
4½" x5"	
	4½"x6"
4½" x5"	

LEFT

4½"x6"	
	4½" x5"
4½"x6"	
	4½" x5"

RIGHT

Firebrick Needed

9"x4½"	8
6"x4½"	4
5"x4½"	3

The final step is to lay the sides of the firebox. Use the same technique described in the other steps, but following the layout shown.






FINISH

You're almost done! There's just a few more steps remaining. They are:

- Place Deschutes chimney cap on top of fireplace with flanges toward inside. Glue all four corners underneath flange using SB20 adhesive.
- Glue hearth stones in place using SB20 adhesive.
- Set cap on woodbox if you did not already do so with Course 8. Glue in place using SB20 adhesive.
- Wait at least 24 hours before firing up the fireplace to let the glue and refractory cement cure.

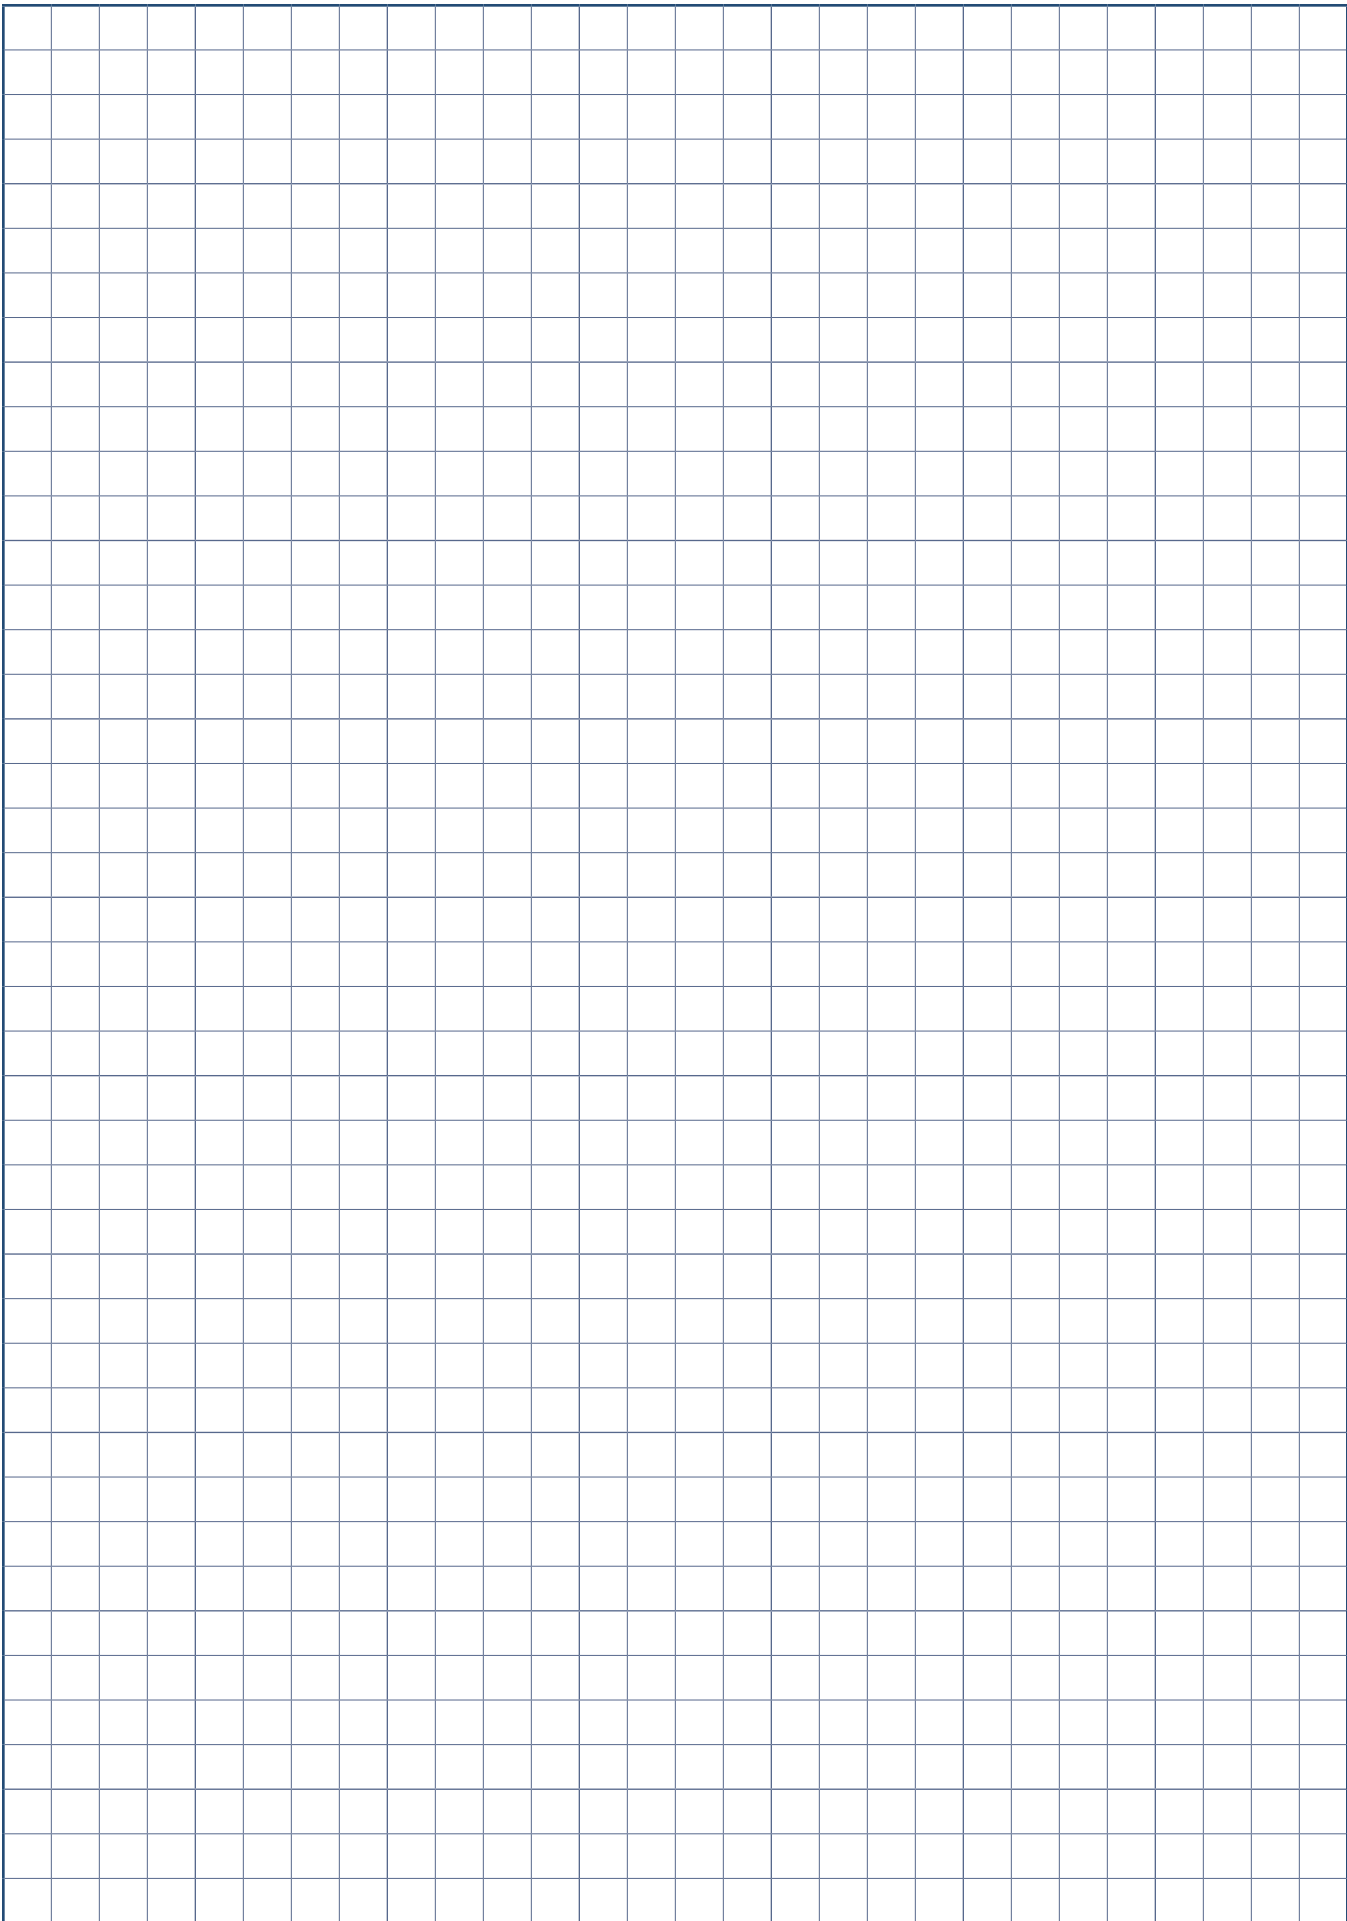

There is a Western Interlock dealer near you!

We invite you to stop by any of our retail facilities or dealerships to speak with a knowledgeable sales person, and to see our product in person.

Oregon

BANDON SUPPLY
541.347.2662 • Bandon

BEST BUY IN TOWN
503.645.6665 • Hillsboro

COPELAND LUMBER
541.997.8474 • Florence

DOUGLAS COUNTY FARMER'S CO-OP
800.452.0981 • Roseburg

KNIFE RIVER
503.769.6465 • Stayton

LEAVE YOUR MARK
541.535.3445 • Phoenix

STONE DEPOT
503.465.1502 • Gresham

BARK BOYS
503.378.7379 • Salem

CEMENT PRODUCTS
541.548.5910 • Redmond

COPELAND LUMBER
541.265.6640 • Newport

EASTERN OREGON RENTAL & SALES
541.963.8300 • La Grande

LANE FOREST PRODUCTS
541.345.9085 • Eugene

LONG BROTHERS' BUILDING SUPPLY
503.981.4041 • Woodburn

VALLEY LANDSCAPE CENTER
503.692.0606 • Tualatin

BEAR VALLEY NURSERY
541.996.2327 • Lincoln City

CLACKAMAS LANDSCAPE SUPPLY
503.656.2891 • Oregon City

COPELAND LUMBER
541.563.3166 • Waldport

KLAMATH STONE & MASONRY SUPPLY
541.273.7036 • Klamath Falls

LANE FOREST PRODUCTS
541.345.9085 • Springfield

SCAPPOOSE SAND & GRAVEL
503.543.8821 • Scappoose

Washington

BLAKE TILE & STONE
360.681.2877 • Sequim

NKS STONES, INC
206.767.9776 • Seattle

SWANSON BARK
360.414.9663 • Longview

VALLEY LANDSCAPE SUPPLY
253.820.6907 • Orting

WESTERN MATERIALS
509.886.5182 • Wenatchee

DOWELL COMPANY
253.852.1700 • Kent

NORTH BEND LANDSCAPE SUPPLY
425.888.6502 • North Bend

TACOMA WINSUPPLY
253.272.8445 • Tacoma

WESTERN MATERIALS
509.547.3301 • Pasco

WESTERN MATERIALS
509.575.3000 • Yakima

GIBSONS NURSERY
509.928.0973 • Spokane

SIMPLY ROCKS
360.863.3975 • Snohomish

UNION HILL HARDSCAPE & BRICK
425.318.5102 • Redmond

WESTERN MATERIALS
360.984.5097 • Vancouver

WESTERN INTERLOCK RETAIL FACILITIES:

10095 Rickreall Rd, Rickreall, OR 97101

9145 Fasset St., Olympia, WA 98512



Paving Stone & Retaining Wall Systems Made for the Northwest.

503.623.9084 OR
360.878.9301 WA

westerninterlock.com