


Murata™ Double Sided Wall Construction


Sometimes site limitations or client requests precludes the building of inset stairs in a Murata™ wall. Sometimes you need a double sided wall that is perpendicular to your Murata™ retaining wall. In those instances, you must create some special double sided blocks to build your wall.

DOUBLE SIDED WALL BLOCK CONSTRUCTION


STEP 1

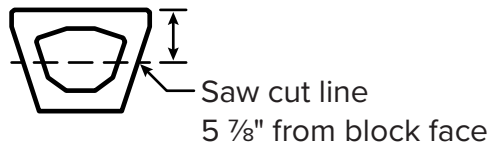

STEP 2

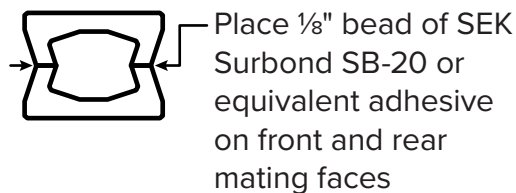


STEP 3

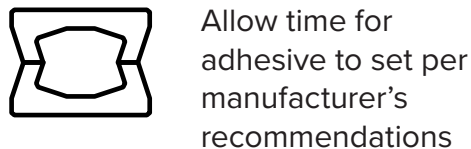


DOUBLE SIDED END BLOCK CONSTRUCTION


STEP 1

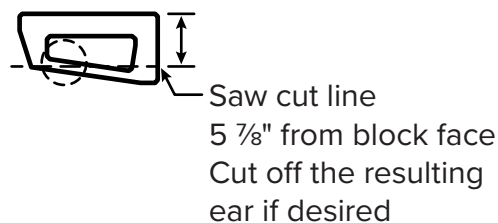

STEP 2

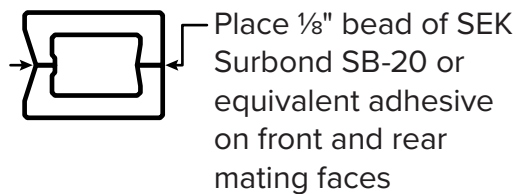

STEP 3

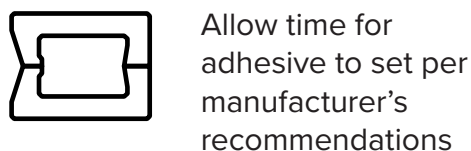

Murata™ Double Sided Wall Construction

Lay your first course like figure A, your second course like figure B,
Then alternate back and forth with every subsequent course.
TO MAINTAIN WALL THE BOND PATTERN, IT WILL BE NECESSARY TO CUT
EVERY OTHER END BLOCK

