



# When is a Gravity Wall Okay?

While an engineered MSE wall is always going to be strongest, sometimes, it may not necessary. Use the figures below to help to determine if a gravity is right for your application. Keep in mind that this is just a starting point. Things like soil conditions, wall height, and surcharge can all be huge variables that can determine which wall construction style is best for you.

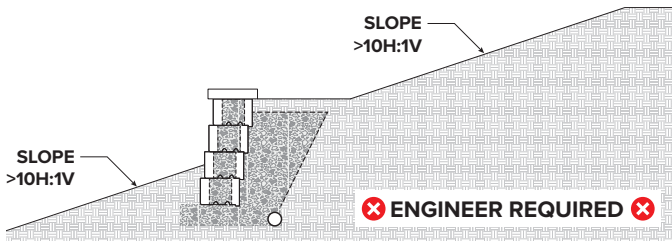


Figure 1

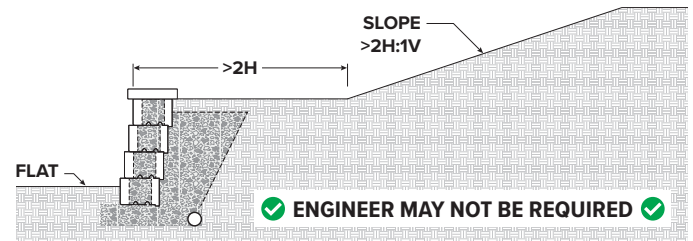


Figure 2

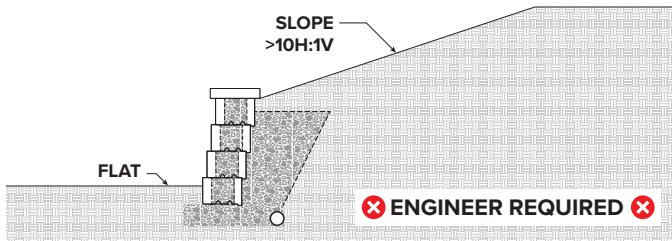


Figure 3

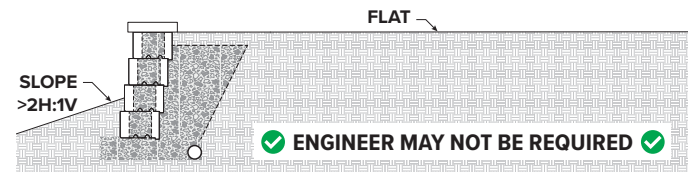


Figure 4

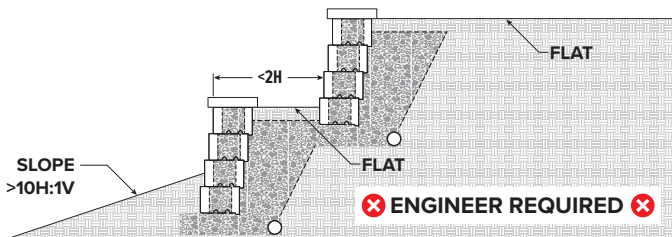


Figure 5

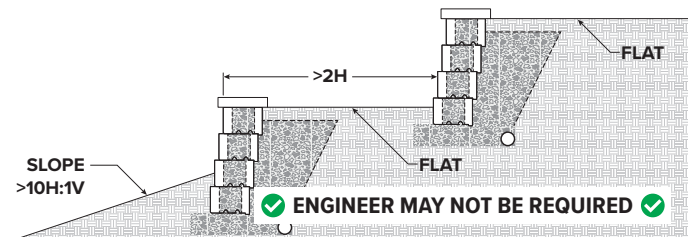


Figure 6

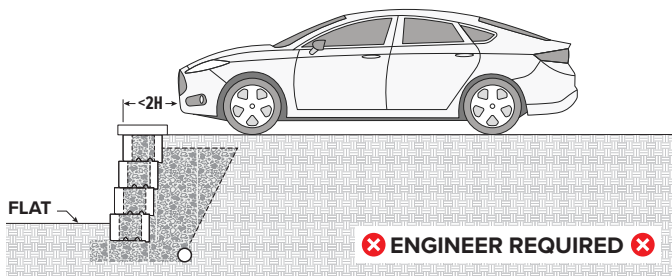


Figure 7

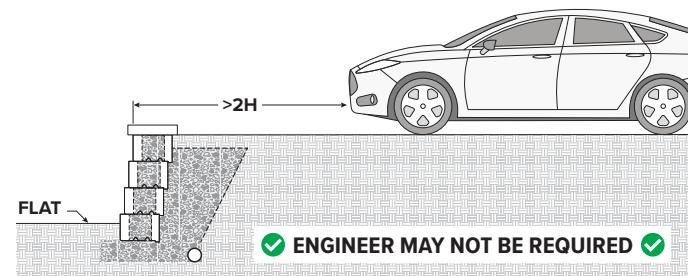


Figure 8

10095 Rickreall Rd. • Rickreall, OR 97371 | 9145 Fasset St. • Olympia, WA 98512

503.623.9084 | 360.878.9301

[westerninterlock.com](http://westerninterlock.com)